

Poutník — user guide: Hobby Optima OnTour Edition motorhome

Informative translation — the Czech version prevails.

Citroën Jumper 2.2 BlueHDi 103 kW (140 hp) · 6-speed manual · front-wheel drive

2021 model · 4 seats · 3–4 sleeping berths

Diesel + AdBlue · gross weight 3,500 kg (category B licence)

6.78 × 2.16 × 2.90 m [\[Karel to confirm height\]](#)



1. Before you drive

- A **category B licence** suffices (gross weight 3,500 kg). Load low and secured; rear garage max. **150 kg**, roof 80 kg.
- **Payload only ~575 kg** [\[Karel: add from registration certificate\]](#), calculated with **10 l water** and one full gas bottle — four people plus a full tank easily exceed 3,500 kg. Fill water to ~1/3 only. Tenant pays any overload fine.
- Dimensions **6.78 × 2.16 × 2.90 m** [\[Karel to confirm height\]](#) — watch underpasses, barriers, canopies, branches. **No automatic car washes.**
- **Diesel only** — never petrol. Diesel/AdBlue filler is left, behind the driver's door; do not confuse with the water filler (blue cap).
- Tyre pressure per the sticker — for 225/75 R16 CP tyres, manufacturer states **5.5 bar** [\[Karel to confirm — rental co. states 4.5 bar\]](#).
- Max. **4 belted seats**; nobody in berths while driving. Lock swivel seats forward-facing, open the cab blind.
- Documents in the passenger glovebox; the habitation key opens the door and all external hatches.

2. Controls and driving

- Key start, 6-speed manual, **front-wheel drive** — **not 4×4**: no snow, mud or soft ground (even a wet meadow can be slippery under 3.5 t).
- Diesel tank **70 l** [\[Karel: manufacturer states 90 l\]](#), approx. **9–14 l/100 km**. AdBlue: warning light gives notice — top up at the filling station beside the diesel filler.
- Tall, long vehicle: **crosswind** on bridges, longer braking distance, **rear overhang** may scrape on sharp entrances — drive slowly, at an angle. Always **reverse with a spotter**; the camera misses height and branches.
- Electric step retracts on engine start — check visually anyway.
- Parked: handbrake + gear engaged; **chocks** on a slope. Below 0°C, apply handbrake lightly only (can freeze). Cab air-con runs off the engine.

3. Checklist before every departure — walk around the vehicle "like a flight attendant"

1. **Gas**: both bottle valves closed, bottles secured; the appliance taps in the kitchen drawer closed [\[Karel to confirm: crash sensor\]](#).
2. **Fridge** on 12 V or automatic mode, door latched; liquids inside secured.
3. **Awning** fully retracted and latched, crank handle stowed in the vehicle.
4. **Step** retracted (check visually!), entrance light off.
5. **Roof hatches and all windows** closed and secured; cab blind open.
6. **Cupboards, drawers, table, shower door** secured; heavy items stored low down.
7. **230 V cable** disconnected (first from the post, then from the vehicle) and stowed, CEE flap closed.
8. **Toilet**: cassette emptied (max. ¾ full while driving), inserted and secured; service hatch, flaps and the garage all locked.
9. **Tanks**: waste tank emptied, valve **closed**; fresh-water tank at about 1/3 only (driving level — see block 4).
10. **Wheel chocks** collected; nothing left standing under or behind the vehicle (chairs, table, hose, cable).
11. **Aerial/satellite dish** lowered [\[Karel to confirm whether fitted\]](#), air conditioning off.
12. **Cab**: mirrors, seats locked, seatbelts on; cooker and heating off, lights off, doors locked.

4. Water — filling, waste, boiler

- **Fresh water 100 l** — tank under the bench seat. Filler on the side [\[Karel: which side\]](#): **blue cap, tap symbol**. Unlock with the door key, turn anticlockwise; screw back on and lock once full.
- **Drinking water only** — kit hose or canister, never the toilet flush hose. Standing water goes stale: use bottled water for drinking.
- Before first fill, **close the FrostControl frost valve** (below), otherwise water drains out under the vehicle.
- **Pump** starts on opening a tap (main switch on). Run hot taps until bubble-free — fills the boiler; then cold. **Tank levels**: panel above the door → green/yellow/red.
- **Before driving, lighten the tank**: turn its dial **3/4 left** — drains to the 10 l driving level; full left empties it (do before storage/frost). Empty only where permitted [\[Karel: dial location\]](#).
- **Waste water 96 l** — tank under the floor, outlet **left, under the vehicle** [\[Karel to confirm\]](#): unscrew cap → open valve → drain → close → tighten. Valve **always closed** while driving (otherwise odour).
- Empty **only at campsite disposal points** — never onto grass or countryside. Save water: shower 2–3 min; a full tank cannot drain.
- **10 l boiler**, part of the Truma system. **FrostControl** (valve [\[Karel: where\]](#)) drains it automatically below 3°C; can close above 7°C (switch to operating, press until it clicks). If frost threatens, drain it (turn 180°).

5. Electricity — 12 V, 230 V, battery

- **Panel above the door**: lights, battery voltage, tank levels, "230 V" LED. **Main switch**: short press = lights off; hold 4 s = also pump, toilet flush, 12 V sockets off.
- **Leisure battery** AGM 95 Ah under the front right seat; its isolator must be **on** (else the step won't retract). Charges while driving and on 230 V.
- **230 V**: blue CEE socket behind the side flap (passenger side). **Breaker off** → unwind cable fully → plug into vehicle, then post (CEE/Schuko adapter in kit) → breaker on.
- **13 A breaker with RCD** [\[Karel: where\]](#) — if it trips again at once, don't force it, call us. Vehicle mains max. **2,300 W**, posts typically 6–10 A: never kettle + heating + air-con together.
- 230 V sockets, charger, electric heating (Combi 6 E) and **habitation air-con** [\[Karel: type\]](#) need a hookup to work. Don't cover the solar panel [\[Karel to confirm\]](#).

6. Camping and etiquette

- **Arrival**: level with chocks (fridge, shower, sleep), handbrake + gear → 230 V → gas → fridge to A → water → heating.
- **Service point order**: 1) waste water, 2) toilet cassette, 3) fresh water; two hoses — drinking, rinsing — never mix up.
- Park only where permitted (campsites, stellplatz sites), no awning/furniture in a car park; **quiet hours** 10pm–7am; rubbish in bins, nothing left outdoors.

Contacts: office Mon–Sat 9am–9pm · **24/7 assistance** +420 723 707 958 · honza@frantisekdron.cz · ČSOB assistance +420 466 100 777 · emergency 112 · accident/breakdown: see "What to Do in an Accident or Breakdown". Items marked [\[Karel to confirm\]](#) confirmed at handover.

● 7. Thetford toilet — cassette approx. 17.5 l [Karel: type]

- **Use:** flush works only with main switch on. Open valve with the lever, **always close** after use; hold flush a few seconds. Only **quick-dissolving paper** (Aqua Soft) — never wipes, hygiene items, cleaners or vinegar (damage seals).
- **Red light** = cassette full, empty at once; better sooner, always before leaving. Max. ¾ full while driving, else it vents out.
- **Removal:** outer hatch — unlock, press both buttons, fold down. Lift clip, pull cassette straight out to the stop, tilt out (only works **valve closed**); handle out, wheel away.
- **Empty only at a chemical-toilet point:** outlet up, remove cap, point down, **thumb on vent button** (down only, else it sprays). Rinse ~5 l from the point's hose — never the drinking-water hose.
- **New charge — via the point's outlet, never the bowl:** 1 Aqua Kem Blue tablet/sachet or 60 ml liquid + **2–3 l water**. Lasts max. 5 days; more chemical doesn't help. Push in until it clicks, lock hatch. Never empty into the countryside.

● 8. Gas — operation and bottle change

- **Gas locker:** side flap — unlock, turn handle 180° left, fold down. 2 × 11 kg propane-butane bottles on a slide-out tray; 30 mbar regulator/hose on the bottle valve.
- **On when stationary:** open bottle valve slowly, **anticlockwise**. Appliance taps (heating/stove/fridge) in the upper drawer/under the sink: open = in line with pipe. Open only what you use.
- **Bottle change:** 1) close empty valve; 2) unscrew hose by hand — **left-hand thread**, no tools; 3) loosen both straps, remove bottle; 4) fit full bottle, secure with **both straps**; 5) screw hose on by hand; 6) open valve; 7) check with **leak spray**/soapy water — never a flame; 8) tray in until it clicks, close flap. No smoking, no flame.
- **Gas closed** (valves + taps): **while driving** [unless crash-sensor regulator — Karel to confirm], refuelling, tunnels, ferry, garages/car parks, when parked up.
- Don't cover the locker's vents or store anything inside. Winter: 2 × 11 kg lasts under a week with heating on.

● 9. Heating and hot water — Truma Combi 6, CP Plus

- Gas heating, **10 l boiler**, CP Plus LCD panel. Before use: bottle valve + "heating" tap open, flue clear. Hot water only **with a full boiler**.
- **Controls:** short press = on. Turn to select, press to confirm, turn to set, press to save. **Off:** hold >4 s (fan runs on). **Fan:** ECO (default)/HIGH/BOOST/NIGHT.
- **Room temp** (house icon): 5–30°C. **OFF = water only = summer mode.**
- **Hot water** (tap icon): OFF/40°C/60°C/BOOST (max. 40 min; boiler heats in ~25 min).
- **Energy source** (Combi 6 E only [Karel to confirm]): **GAS/EL 1** (900 W)/EL 2 (1,800 W)/MIX (electric priority). Electric only **on 230 V hookup**; 6 A post = EL 1 only, check fuse for EL 2 (≈8 A). No source selected = gas.
- **Winter:** room 18–22°C, water 60°C, ECO; heat overnight too, else water freezes. No heating while driving [no crash sensor — Karel to confirm] or timed in a garage (fumes).
- **"E + number":** press to restart; recurs → call us. "W" = warning, heating continues.

● 10. Fridge — Dometic RML 10.4 (absorption, 133 l, AES auto) [Karel: label]

- **On:** hold On/Off 2 s; 4 s to switch off (beeps). **Mode** button picks the source (LED lit), temperature button sets level — medium for 15–25°C outside.
- **12 V** — only driving, engine on. **230 V** — campsite hookup. **GAS** — parked: bottle valve + "fridge" tap open, self-ignites. **A = auto:** 230 V → 12 V → gas — leave on A.
- **Tank-stop:** auto mode blocks gas 15 min after engine stop; switch off if refuelling takes longer.
- **Vehicle must be level** (max. 3°) — tilted = won't cool → use chocks. Don't cover side vents, keep shaded; below 8°C use winter covers [Karel: included?].
- **Pre-cool:** ideally 12 h before loading, min. 4–6 h; load pre-chilled, max. 3 kg on the door shelf.
- **Door** locks on closing click; keep locked while driving. Not cooling after a bottle change = air in line: cycle off/on 3–4×.

▲ 11. Awning — Thule Omnistor (crank, 2.5 m)

1. Hook the crank in, turn **clockwise** until out ~1 m.
2. Fold telescopic **legs** down to the ground before extending further. Don't force to the stop; if slack, wind back a little.
3. **Always guy out:** peg the leg feet, secure both straps/lines from the leg tops out to ground pegs, tension [Karel: kit — straps, pegs, mallet]. **Never extend in wind without straps/pegs** — report a missing kit at collection.
4. In rain, drop **one corner 10–15 cm** so water runs off — never let it pool.
5. **Retract** above ~30 km/h, before storms, in heavy rain/snow — and **always overnight, when away, before driving**. Never unattended; straps won't survive a storm.
6. Retract **with two people** (one holds the front rail): anticlockwise ~1 m, legs in and secured, fully in, latch, stow crank.
7. Sun shading, not a shelter; must not reach the neighbour's pitch. **Weather damage or not closing it properly is paid by the tenant** (deposit, fee schedule).

● 12. Return

- **Toilet cassette emptied/rinsed, waste tank drained** — else CZK 1,000 per the fee schedule. Fresh water as agreed at collection.
- **Full diesel tank** (refuelling: CZK 50/l + CZK 500). Gas closed, both bottles in the locker.
- Tidy interior, washed crockery, empty bin; fridge empty, off, door ajar. Excess soiling CZK 1,500.
- Awning dry and retracted; chocks, 230 V cable + adapter, hose, chairs, table, keys, documents all present.
- **Photos** at collection and return. Report damage at once — don't repair without consent.

▲ GAS — safety rules

- **Never heat with the stove or oven.** They use up interior oxygen and produce odourless carbon monoxide — risk of unconsciousness and death. Only the Truma Combi heats.
- **Smell of gas:** close valves/taps, no flame, **no electrical switches**, open doors/windows, leave and call us. Only restart after a professional check.
- **Extinguisher** by the entrance door [Karel: location]. **Gas/CO alarm:** same steps as gas smell, don't re-enter.
- Never leave the stove unattended, even asleep; don't close the hot glass lid; never flame-test for leaks. Ventilate when cooking; don't cover heating vents/flue — suffocation risk. Keep the gas/CO detector working.